



ANW.115 – Megaphone

Age grade: 5+

American Ninja Warrior™ Megaphone

Contents:

Megaphone
6 AA batteries included

Warranty: (1) one year on all parts and

Step 1: Install batteries - 6AA included

Step 2: Press On button



Warning! Not suitable for children under 36 months. Long Cord. Strangulation hazard

Warning! **CHOKING HAZARD** small parts- not for children under 3 years.

To use Announcer button: Place your mouth approximately 1" from the speaker. Speak in a clear voice and adjust the volume using the blue rotator disc



Press Siren button to activate the Siren. Press it again to turn it off

Battery Warning -Important Battery Information

- Battery installation and removal should be performed by an adult
- Use only batteries recommended
- Be careful to install the batteries with the correct polarity as indicated
- Do not mix old and new batteries
- Remove all batteries when replacing
- Do not mix alkaline, standard, rechargeable, or different types of batteries.
- Different types of batteries or new and used batteries should not be mixed
- Non-rechargeable batteries are to be removed from the toy before being charged
- Rechargeable batteries are only to be charged under adult supervision
- Only batteries of the same or equivalent type as recommended are to be used
- The supply terminals are not to be short-circuited
- Remove exhausted batteries